

CartStop Corner Guard


INSTALLATION INSTRUCTIONS

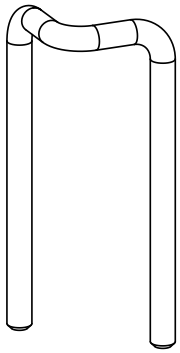


CartStop Shelf Guard Stainless

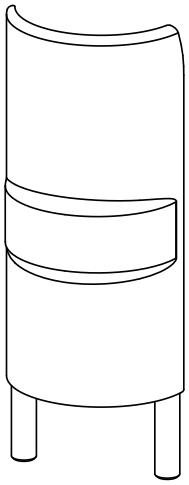

CartStop Corner Guard Stainless

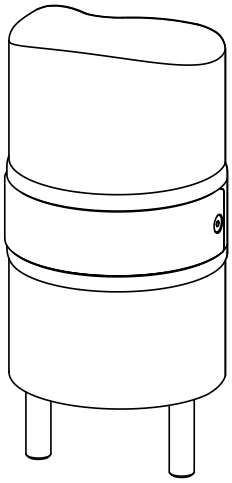


CartStop Corner Guard Standard

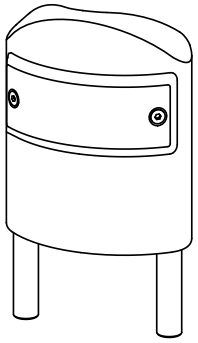


CartStop Shelf Guard

Components

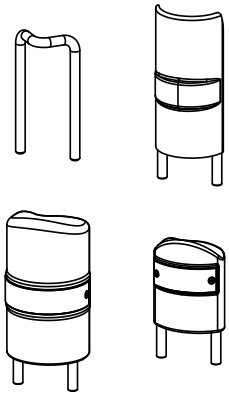

Corner Guard



Flange Anchor Kit CSFA-10-KIT

Tools Required



Straight Edge



Dust Pan & Brush



Rubber Mallet



Tape Measure



Hammer Drill with 1″ Carbide Bit



Vacuum



Chalk Line



Pencil



Plumb Line



Framing Square



Allen Wrench Set



Wire Brush

Questions


McCue Corporation
Peabody, Massachusetts, USA
+1 (800) 800 8503
customercare@mccue.com

McCue UK & Europe
Milton Keynes, United Kingdom
+44 (0)1908 365 511
uksales@mccue.com


McCue Asia
迈客(厦门)有限公司
Xiamen, Fujian, China
+86-592-2200790

mccue.com


1

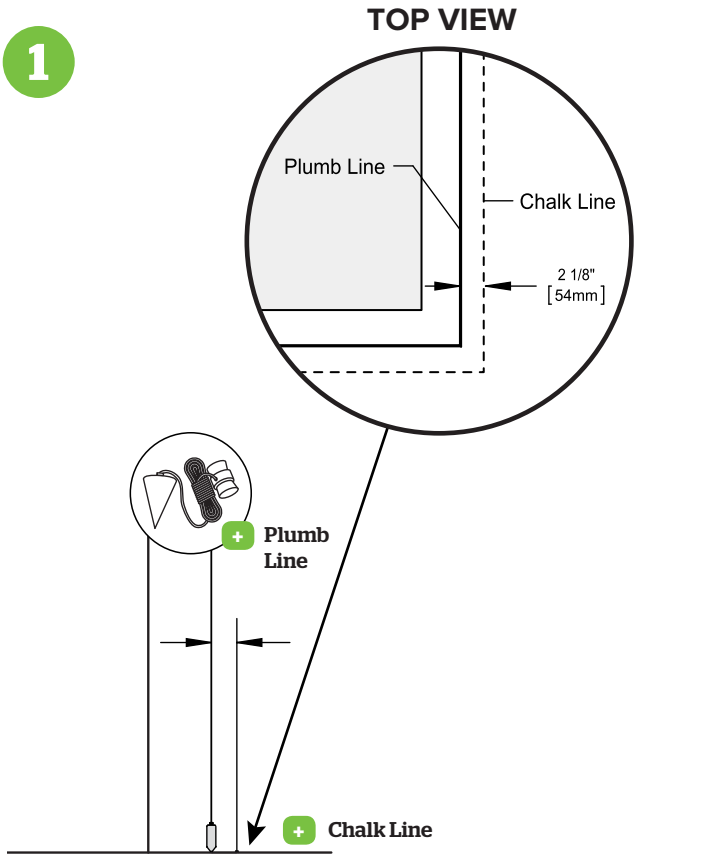

TOP VIEW
Plumb Line
Chalk Line
2 1/8"
[54mm]
Plumb Line
Chalk Line

2

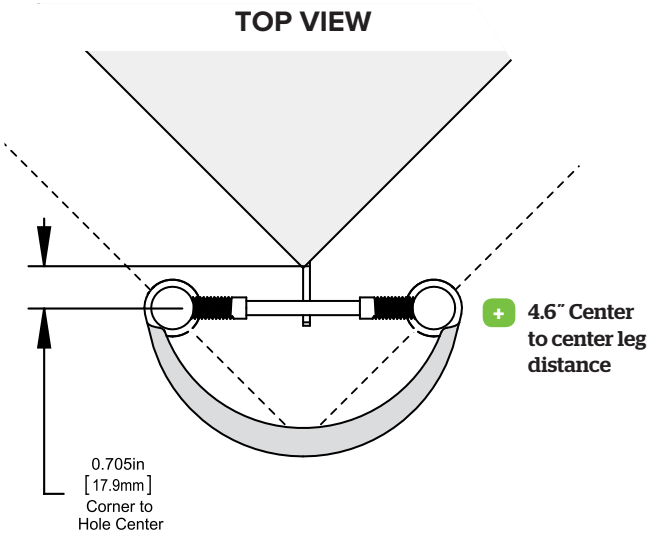

TOP VIEW
4.6˝ Center to center leg distance
0.705in
[17.9mm]
Corner to Hole Center

3

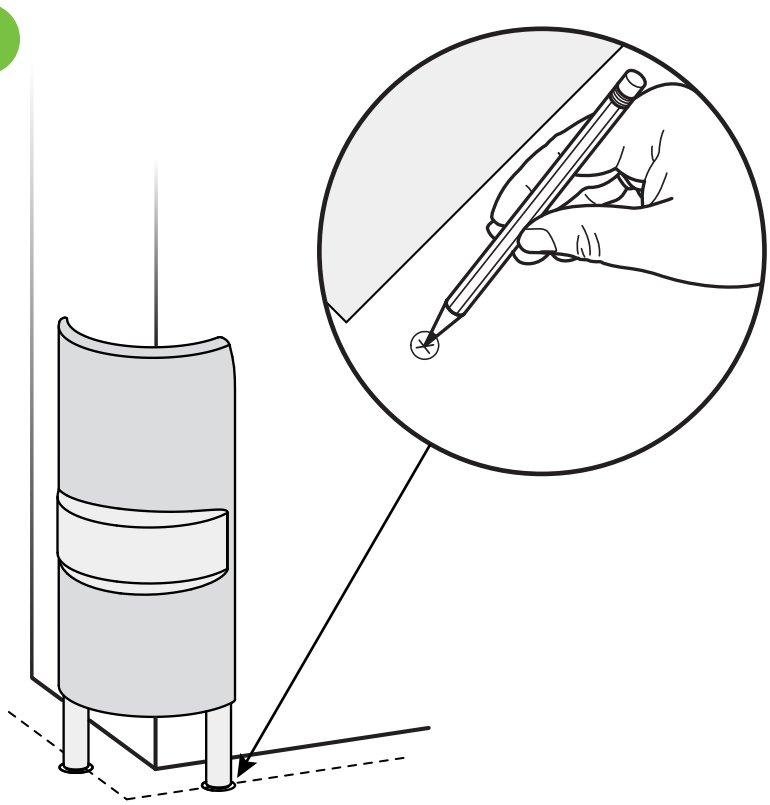


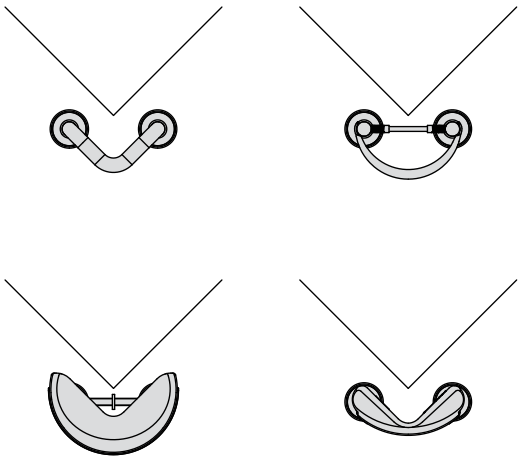


4

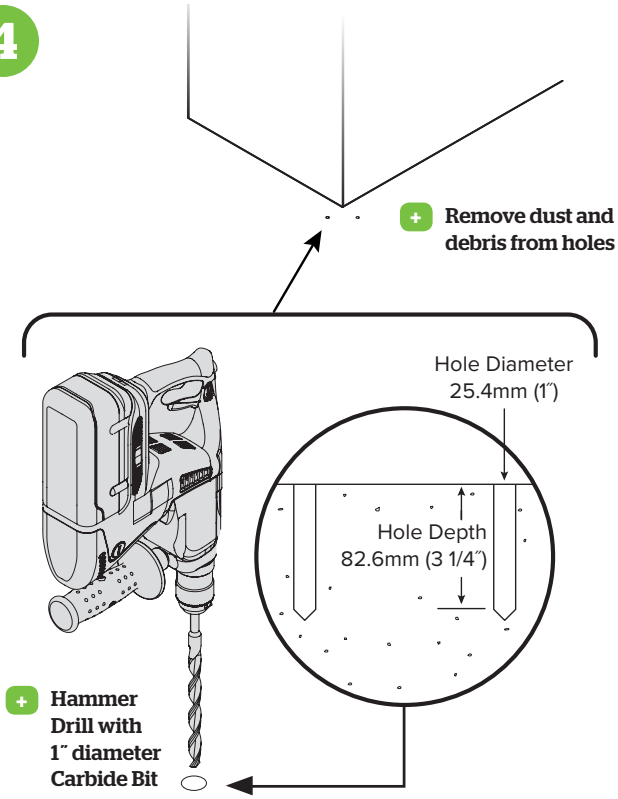



5

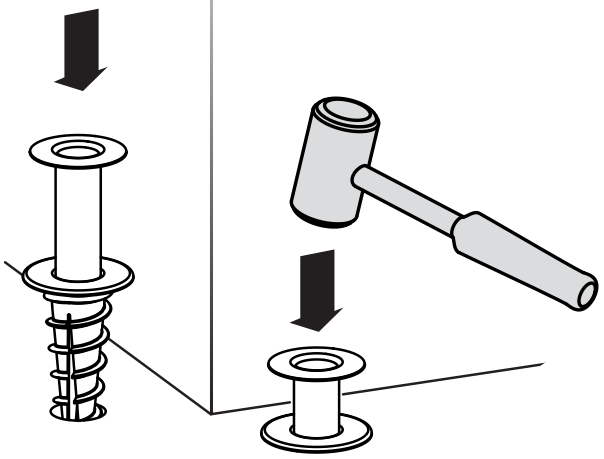

Alternative Epoxy Option

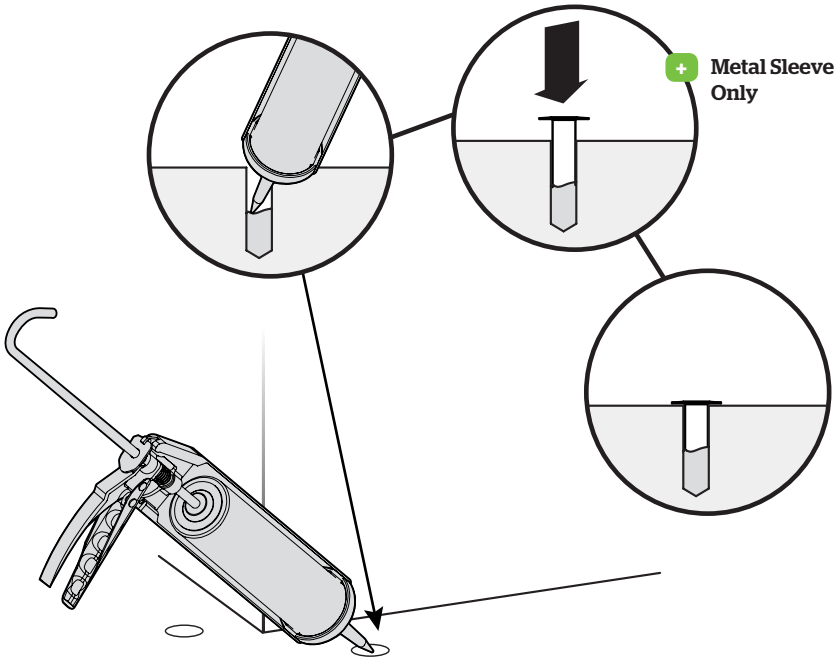


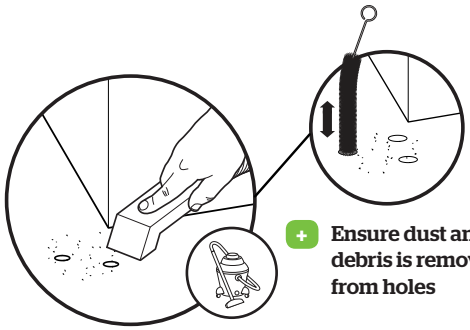

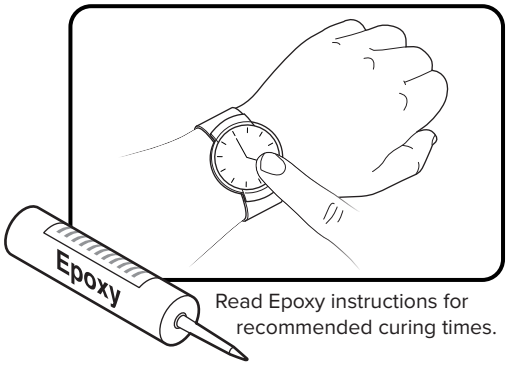


Remove plastic anchor and insert stainless steel sleeve into epoxy-filled holes until flange sits flush with the floor

6

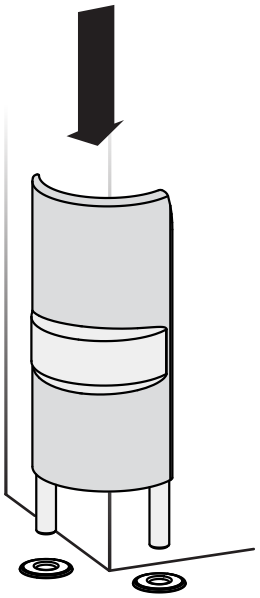


Final step for CartStop Shelf Guard & Shelf Guard Stainless

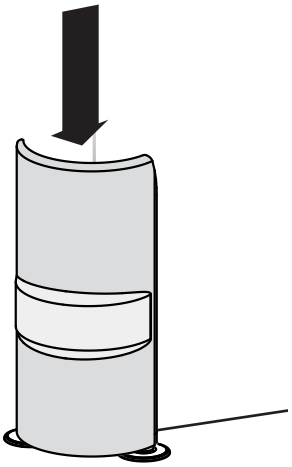


Guard will sit about 1/4˝ above the floor when installed

7

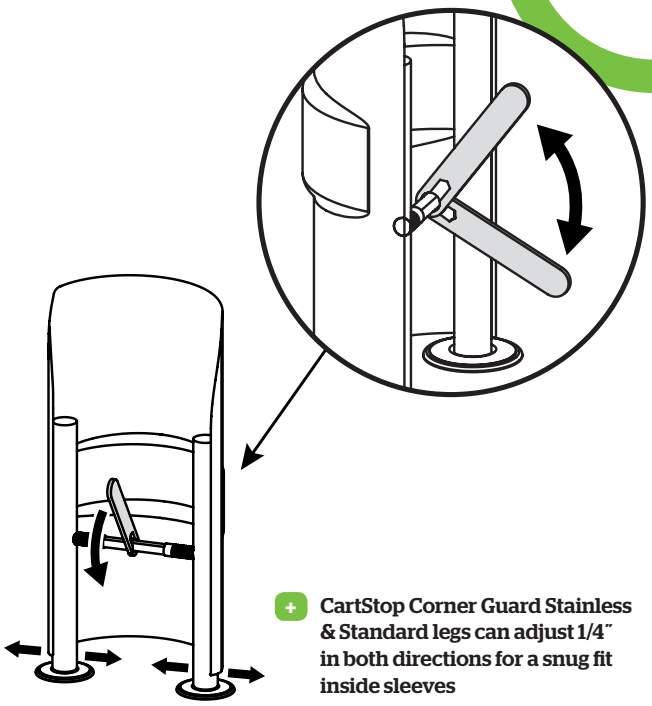


CartStop Corner Guard Stainless & Standard legs can adjust 1/4˝ in both directions for a snug fit inside sleeves

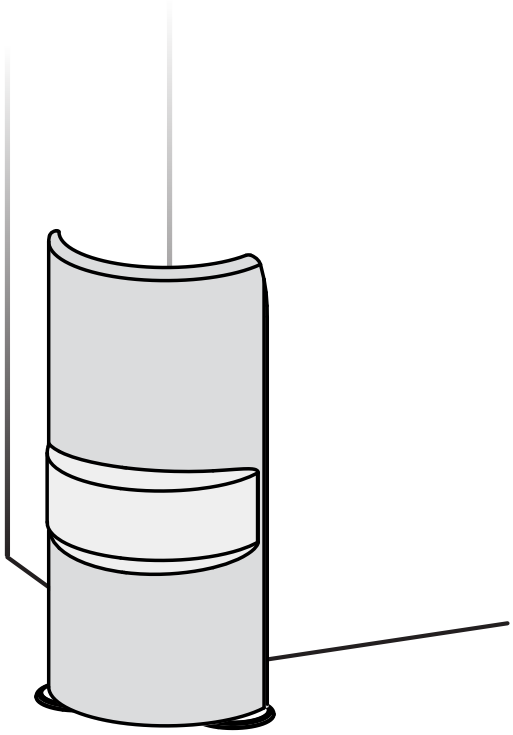

CartStop Corner Guard

HOLE TEMPLATE POSITIONING GUIDE

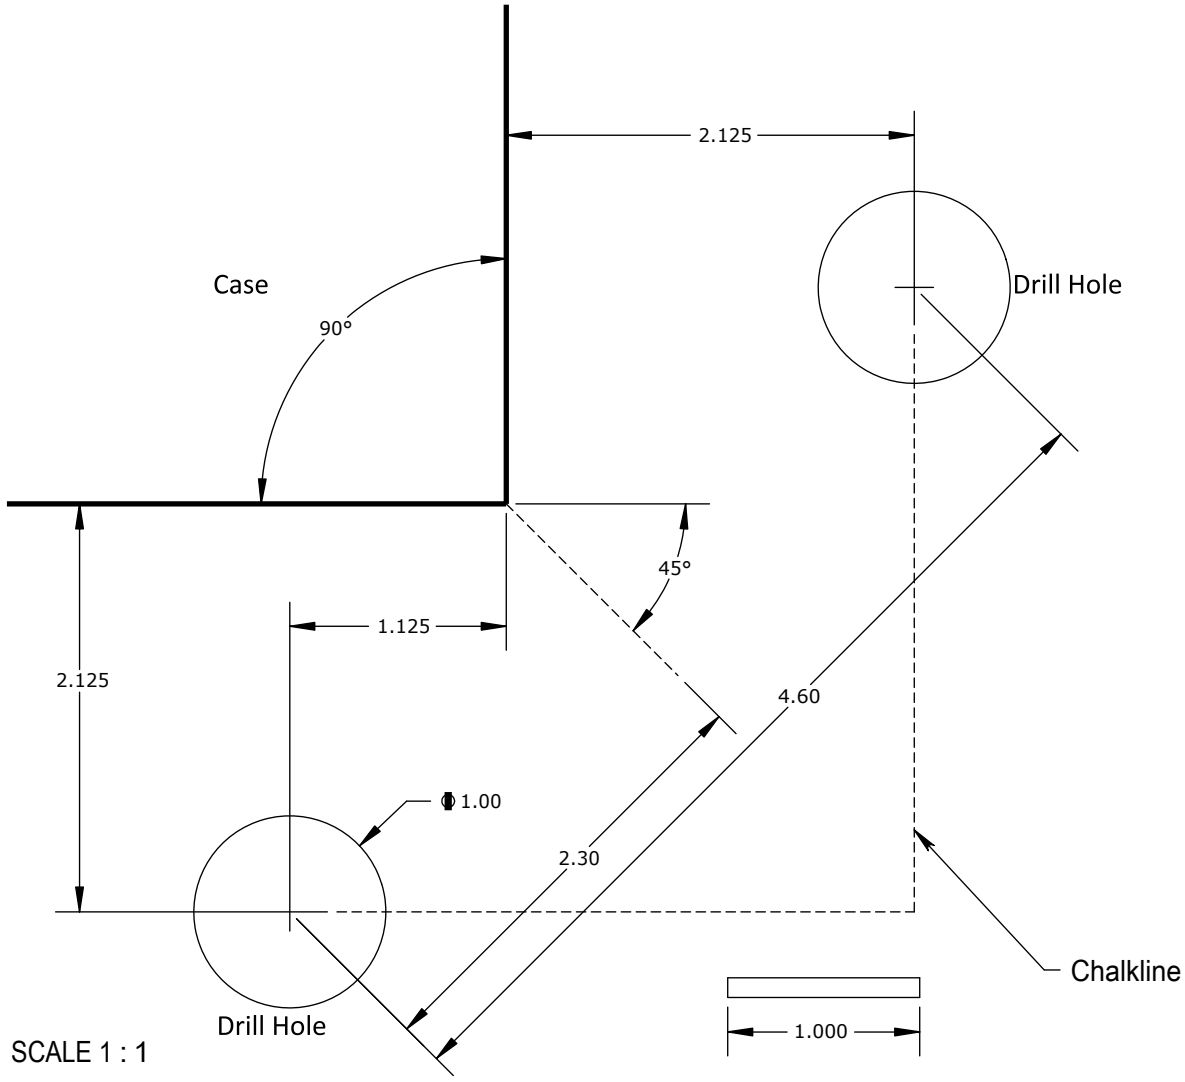

Installation instructions are provided for guidance only. The seller assumes no liability regarding improper installation or misapplication of its products. It is the installer's responsibility to check for proper installation and, if in doubt, contact McCue Customer Care for assistance. ©2016 McCue Corporation. OCT2016